



Installation Instructions for Kahler™ Bass
Tremolo Bridge Systems, Series 2400 and 2410


- 1). Make sure instrument to be fitted is properly intonated.
- 2). Place short piece of masking tape on either side of existing bridge. Then, mark intonation points on "E" and "G" strings.

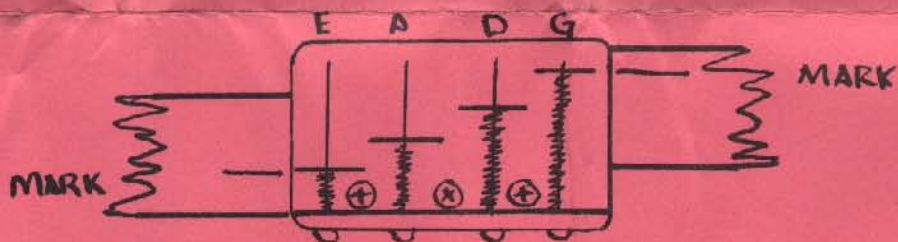

- 3). Remove old bridge.
- 4). Split intonation points in half.

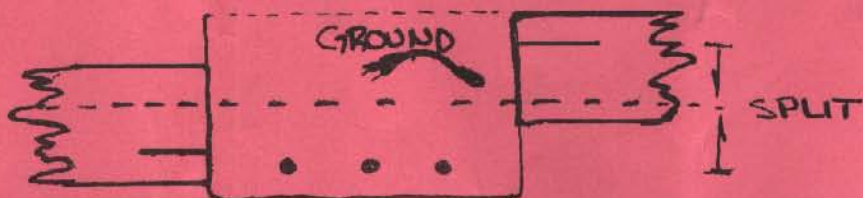

- 5). Disconnect ground wire and pull through electronics cavity.
- 6). Use template (supplied). Match center line of template to center line drawn on tape. **IMPORTANT***** - MAKE SURE you use the proper line for the corresponding model.

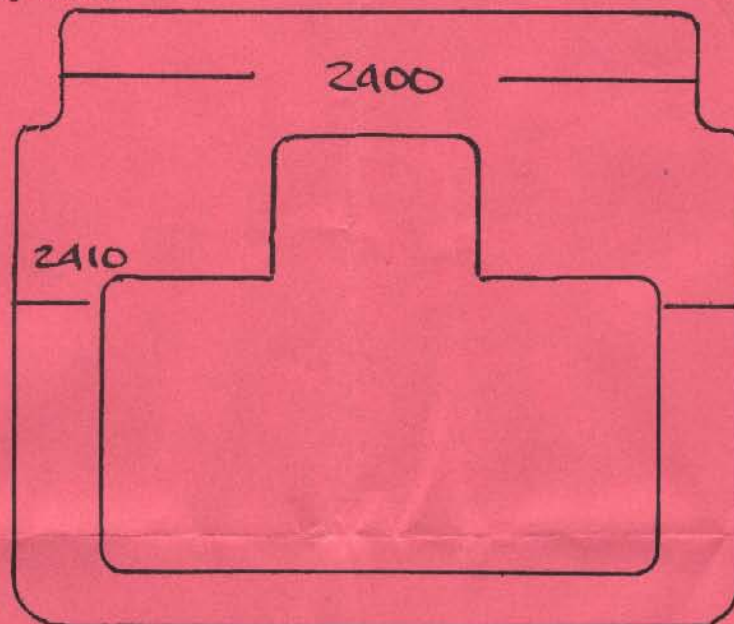

- 7). Scribe inside route line of template with a sharp object.
- 8). Remove template and route a 3/4" deep hole.
- 9). Place tremolo unit over newly routed cavity making sure that it is centered correctly, and that the cam does not bind on the sides of the routed cavity.
- 10). Drill guide holes for screws using tremolo unit itself for positioning.
- 11). Use black wood screws (supplied) and install unit.
- 12). String up and play!